



# PROFESSIONAL AUDIO

## ENGINEERING AND MANUFACTURING

VM11T-DRV



VM11S-DRV

VM8-DRV

*VM series Box Type Powered Mixer*

OWNER'S MANUAL

ENGLISH

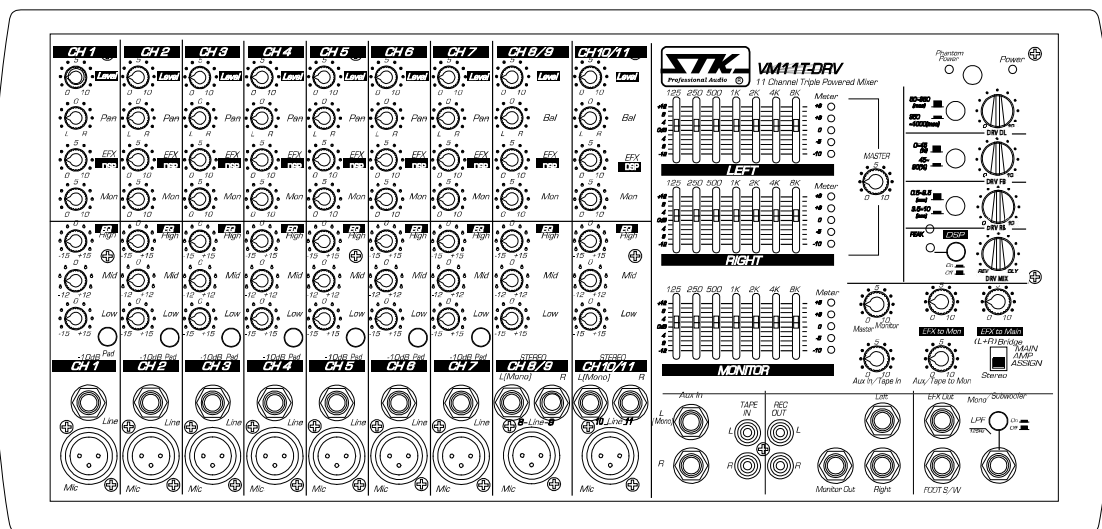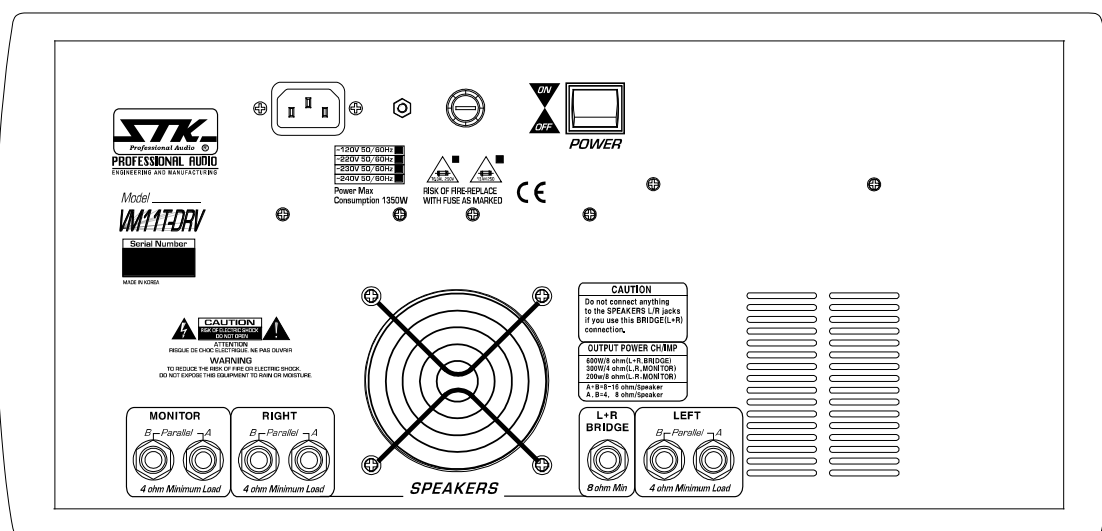



# PROFESSIONAL AUDIO

## ENGINEERING AND MANUFACTURING

VM11T-DRV

VM11S-DRV

VM8-DRV

Powered Mixers

## Table Of Contents

1. Introduction.....	2
2. Important Safety Instructions.....	3
3. Warranty Information.....	4
4. Panel Description.....	5-13
5. Connecting Your System.....	14-16
6. Operating Your System.....	17-18
7. System Hookup Diagram.....	19-21
8. Block Diagrams.....	22-24
9. Specifications.....	25-28

## I Introduction

The new VM11T-DRV, VM11S-DRV and VM8-DRV mixers offer solid, feature-packed performance in a compact, economical format. The VM11T-DRV/11S-DRV features 11 independent channels, while the VM8F-DRV features 8 channels.

Each channel incorporates a low impedance, XLR input and a high impedance quarter inch phone jack input. Separate pre-monitor sends, active high, mid and low equalization, and post DSP/effect sends are also provided for each channel on the VM versions.

The master section for the VM11T-DRV/11S-DRV provides controls for main, monitor, effect send, effect return. The VM mixer features a seven band equalization. Both models graphic EQ sections offer +/-12dB cut/boost capability.

Each VM11T-DRV/11S-DRV features a footswitchable, Digital Effect, while the VM11T-DRV/11S-DRV offer linear control Digital Signal Processing (D.S.P.).

The VM11T-DRV, VM11S-DRV and VM8-DRV offer portability, versatility, and dependability.

## II Important Safety Instructions

- 1. Read Instructions-** All the safety and operating instructions should be read before the appliance is operated.
- 2. Retain Instructions-** The safety and operating instructions should be retained for future reference.
- 3. Heed Warnings-** All warnings on this appliance and in the operating instructions should be adhered to.
- 4. Follow Instructions-** All instructions should be followed.
- 5. Water and Moisture-** This appliance should not be used near water- for example, near a bathtub, sink, laundry tub, in a wet basement, near a swimming pool, etc.
- 6. Heat-** This appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- 7. Power Sources-** This appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. if you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For appliances intended to operate from battery power, or other sources, refer to the operating instructions.
- 8. Polarization-** If the appliance is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other), this plug will fit into the power outlet only one way. This is a safety feature. if you are unable to insert the plug fully into the outlet, try reversing the plug. if the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 9. Grounding-** If the appliance is equipped with a 3-wire grounding-type plug, a plug having a third (grounding) pin, this plug will only fit into a grounding-type power outlet. This is safety feature. if you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
- 10. Power Cord Protection-** Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
- 11. Damage Requiring Service-** Unplug this appliance from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a. When the power-supply cord or plug is damaged.
  - b. If liquid has been spilled, or objects have fallen into the appliance.
  - c. If the appliance has been exposed to rain or water.
  - d. If the appliance does not operate normally by following the operating Instructions.  
Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the appliance to its normal operation.
  - e. If the appliance has been dropped or the cabinet has been damaged.
  - f. When the appliance exhibits a distinct change in performance-this indicates a need for service.
- 12. Servicing-** Do not attempt to service this appliance yourself as opening or removing covers may expose you to dangerous voltage or other hazards.  
Refer all servicing to qualified service personnel.

### III Warranty Information

#### UNPACKING

As a part of our system of quality control, every STK product is carefully inspected before leaving the factory to insure flawless appearance. After unpacking, please inspect for any physical damage. Save the shipping carton and all packing materials, as they were carefully designed to reduce the possibility of transportation damage should the unit again require packing and shipping. In the event that damage has occurred, immediately notify our dealer so that a written claim to cover the damage can be initiated with the carrier. The right to any claim against a public carrier can be forfeited if the carrier is not promptly notified and if the shipping carton and packing materials are not available for inspection by the carrier. Save all packing materials until the claim has been settled.

#### STK Customer Service Department

369-2 KURAERI YANGCHON-MYUN,  
KIMPO-CITY

KYUNGGI-DO, KOREA.

TEL : +82-31-981-1788

FAX : +82-31-981-1784

E-mail : [stkcom@stkpro.com](mailto:stkcom@stkpro.com)

[www.stkpro.com](http://www.stkpro.com)

#### STK LIMITED 1 YEAR WARRANTY

STK electronics are warranted to be free from defects in materials and workmanship under normal use for a period of 1 year from date of original purchase. During that period, STK will at its option, repair or replace materials at no charge if product has been delivered to STK by an STK dealer or STK Service Center together with the original sales receipt or other proof of purchase. Warranty excludes fuses, exterior finish, normal wear, failure due to abuse, or operation outside of specified ratings. Warranty applies to original purchaser only. This warranty gives you specifically rights which vary from state to state.

For more information about warranty repair, please contact: ***Customer Service Dept.,  
The STK Professional Audio.***

#### FOR YOUR RECORDS

All of us at STK thank you for your expression of confidence in STK products.

The unit you have purchased is protected by a limited 1 year warranty. To establish the warranty, be sure to fill out and mail the warranty card attached to your product.

*For you own protection, fill out the information below for you own records.*

Model Number \_\_\_\_\_

Serial Number \_\_\_\_\_

Dealer \_\_\_\_\_

Date Of Purchase \_\_\_\_\_

Salesman \_\_\_\_\_

Phone \_\_\_\_\_

Other Information

---


---

---

---

# IV Panel Descriptions

## VM11T-DRV / VRM11T-DRV

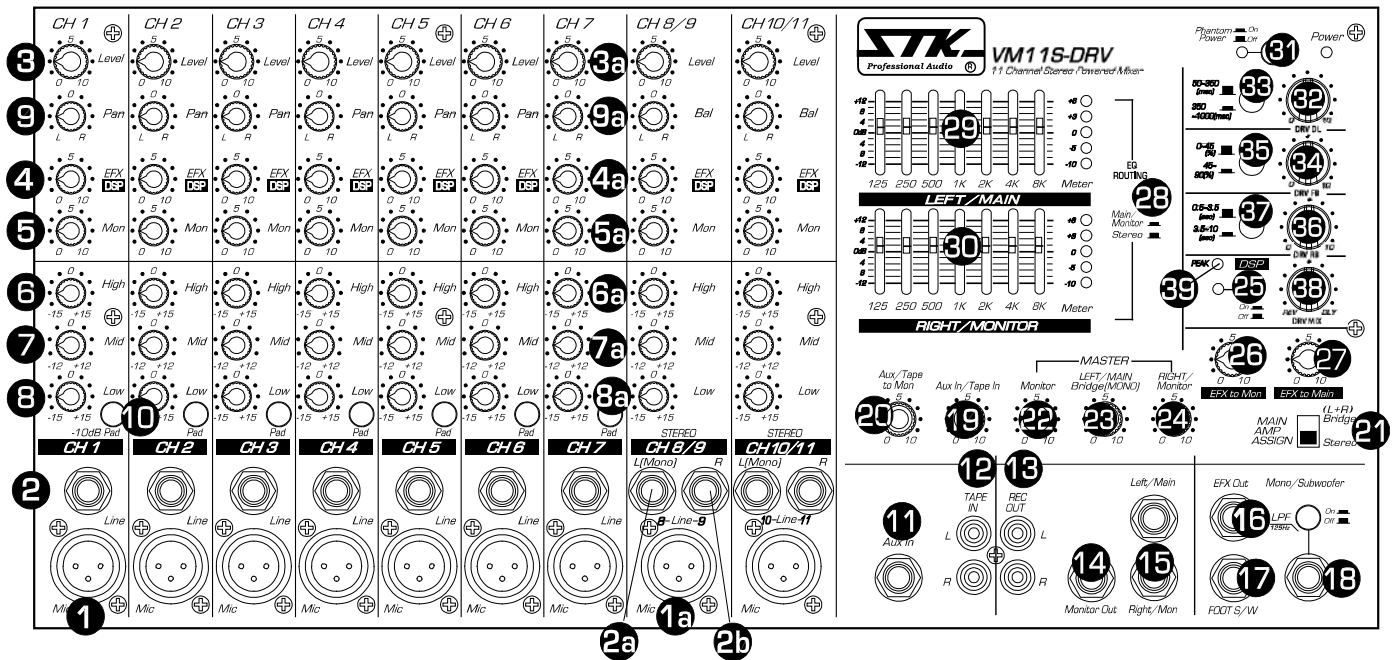

Note: The operation of the VM11T-DRV Triple powered mixer is nearly identical. This manual will help you understand and get the most out of all VM mixers.

### MONO INPUT CHANNELS

#### 1. Mic In

This input accepts a standard XLR microphone connector and low impedance microphone.

#### 2. Line In

This input accepts a 1/4inch two conductor plug and is suitable for unbalanced line level sources.

#### 3. Level

The channel level control provides continuously variable adjustment of the channel output level to the main mixing buss

#### 4. EFX(DSP)

The channel EFX(DSP) control varies the amount of channel signal sent to the D.S.P, as well as to the effects send circuitry

#### 5. MON

This control varies the amount of signal sent to the monitor send circuitry.

#### 6. High

The high frequency shelf control is set at 8kHz. You can increase or attenuate frequencies 8kHz(and above)up to 15dB. There is a detente in the 0 position indicating a flat response.

#### 7. Mid

The mid frequency is centered at 2.5 kHz. You can increase or attenuate the midrange frequencies by as much 12dB. A detente is provided in the 0 position indicating a flat response.

#### 8. Low

The low frequency shelf control is set at 80Hz. You can increase or attenuate frequencies 80Hz(and below) up to 15dB. A detente is provided in the 0 position indicating a flat response.

#### 9. PAN

This control varies the amount of channel signal sent to either the left or right channel of the stereo mixer.

#### 10. PAD

This switch attenuates the input signal by 10dB when connecting a line level device to channels 1-7, or if the mic input is distorted turn-this switch on (the pressed-in position)

### STEREO INPUT CHANNELS

In addition to the standard seven mono input channels, the VM11T-DRV features two stereo input channels. Each of these stereo channels has two 1/4" line level inputs. The signal from the left 1/4" line level input is routed to the left output and the signal from right 1/4" line level input is routed to the right output. The balance between these two inputs is controlled by the pan control.

#### 1a. Mic In

This input accepts a standard XLR microphone connector and low impedance microphone.

#### 2a, 2b. Line In

These channels may be used as monaural inputs by simply using the "odd channel" input(8 or 9), in which case the mono signal you put into the odd channel is fed to both odd and even stereo inputs.

#### 3a. Level

The channel level control provides continuously variable adjustment of the stereo channel's output level to the main output.

# Panel Descriptions

## 4a. EFX(DSP)

The channel EFX(DSP) control varies the amount of channel signal sent to the D.S.P, as well as to the effects send circuitry.

## 5a. MON

This controls the amount of signal sent from an individual channel to both the Mon master control.

In addition, this control also feeds the monitor send.

This aux send is a pre channel level control and pre EQ. This means that the level sent from an individual input will not be affected by adjustment of the main channel level control or EQ settings and allows a completely separate mix for stage monitors.

## 6a. High

The high frequency shelf control is set at 8kHz. You can increase or attenuate frequencies 8kHz(and above) up to 15dB.

There is a detente in the 0 position indicating a flat response.

## 7a. Mid

The mid frequency is centered at 2.5 kHz.

You can increase or attenuate the midrange frequencies by as much 12dB. A detente is provided in the 0 position indicating a flat response.

## 8a. Low

The low frequency shelf control is set at 80Hz. You can increase or attenuate frequencies 80Hz(and below) up to 15dB. A detente is provided in the 0 position indicating a flat response.

## 9a. Bal

This control varies the amount of channel signal sent to either the left or right channel of the stereo mixer.

## FRONT PANEL MASTER SECTION

### 11. Aux In

Connect these jacks to the output jacks of an external effects processor. If the effects processor has a stereo output, connect it to the AUX IN L(MONO) and R jacks. If it has a mono output, use the AUX IN L(MONO) jack. Signal input to these jacks is sent to the ST bus.

### 12. Tape In

Use these jacks to connect a stereo device, such as a cassette player or a CD player. The signals input to these jacks is sent to the ST bus.

### 13. Rec Out

The ST bus signal before it has passed through the MASTER control and graphic equalizer.

### 14. Monitor Out


The MONI bus signal which has passed through the MASTER control and graphic equalizer.

### 15. Main L/R Out

The ST bus signal which has passed through the main MASTER control and graphic equalizer.

### 16. EFX Out

The input of an external effect such as a delay or echo can be connected to this jack. The signal adjusted by the EFFECT control of each channel will be sent to the EFFECT bus, its level adjusted by the EFFECT OUT control, and output from this jack.

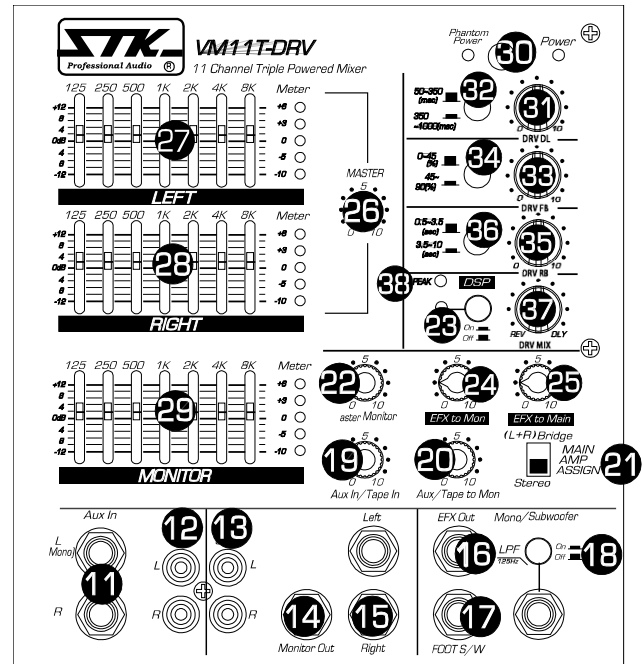

## 17. Footswitch

The DSP Footswitch jack is a standard 1/4 " size accommodating a monoaural ON/OFF Footswitch that enables/disables the internal digital effects.

## 18. Mono/Subwoofer

This line level subwoofer output allows you to conveniently add supplemental buss to your system. The signal is derived from summed left+right master output or the master output and is routed through a 125Hz low pass filter.

## 19. Aux In /Tape In Control

This control varies the amount of the signal from the Tape In and Aux In mixed back to the main buss.

## 20. Aux / Tape to Mon Control

The Aux/Tape to Mon Control provides continuously variable adjustment of the signal derived from the tape in jacks located on the connector panel and sends that signal to the monitor/aux master control.

## 21. Main Amp Assign (L+R/Bridge, Stereo)

This slide switch select a signal route depending on the speakers connected to the speaker L/R/L+R bridge jacks on the rear panel.

## 22. Master Monitor Control

This controls the overall signal level at the Monitor Line Out. This setting is output to both the front and rear panel monitor jacks and appears in the monitor bus signal.

## 23. DSP Switch

This push control activates/deactivates the DSP effects.

## 24. EFX to Mon

This master EFX control varies the amount of overall combined signal of the independent channels sent to the Monitor EFX bus.

# Panel Descriptions

## 25. EFX To Main

This master EFX control varies the amount of overall combined signal of the independent channels sent to the Main EFX bus.

## 26. Master Control

This Control adjusts the ST bus signal output level. This setting is output to the SPEAKERS L/R/L+R, Bridge jacks and the MAIN (STEREO) jack on the rear panel and appears in the ST bus signal.

## 27. Graphic Equalizer(Left)

7 band graphic equalizers are provided on the front panel and may be used for stereo Left of VM11T-DRV, VRM11T-DRV.

## 28. Graphic Equalizer(Right)

7 band graphic equalizers are provided on the front panel and may be used for stereo Right of VM11T-DRV, VRM11T-DRV.

## 29. Graphic Equalizer(Monitor)

7 band graphic equalizers are provided on the front panel and may be used for stereo Monitor of VM11T-DRV, VRM11T-DRV.

## 30. Phantom Power Switch

This push button control provides 48V of DC power to the independent channel XLR inputs for the use of condenser microphone without external battery.

## 31. Delay Time Adjust

This control adjusts the delay time .

## 32. Delay Time Range Select

This push control select delay time range from 50~350(msec) to 350~1000(msec).

## 33. Delay Feedback Adjust

This control adjusts the delay feedback.

## 34. Delay Feedback Range Select

This push control select delay feedback range from "0~45(%)" to "45~90(%)"

## 35. Reverb Time Adjust

This control adjusts the reverb time.


## 36. Reverb Time Range Select

This push control select reverb time range from "0.5~3.5(sec)" to "3.5~10(sec)"

## 37. Reverb and Delay Mix Balance Adjust

This control adjust the reverb or delay mixing level.

## 38. DSP Peak Indicator

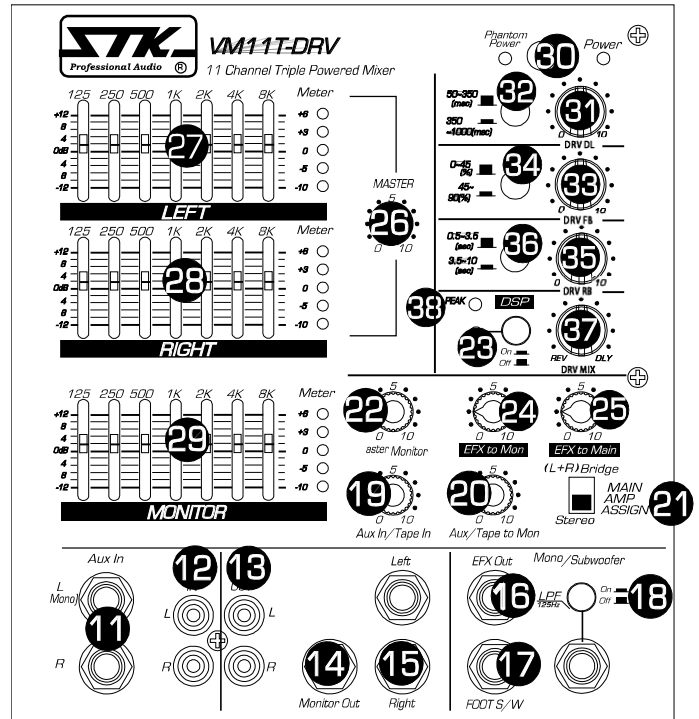

## Digital Signal Processor Function and Features

The STK digital reverbs gives the power to create original sounds with a wide range of effects. Effect patch(effect setting) can be stored in the internal memory, calling up any patch is quick and easy by linear potentiometer.

## FEATURES


- \* Stereo-Effect preset available divided by potentiometer.
- \* Easy program selection methods.
- \* Automatic input audio signal "overshooting" indication circuit on-board.
- \* Usage of a 1M byte SRAM for superior quality stereo reverb and delay sound.
- \* Usage of the famous ASAHIKASEI 24bit DSP with built in 20 bit AD/DA stereo converter.
- \* 20bit delta sigma 64 x oversampling AD converter.
- \* 20bit delta sigma 128 x oversampling AD converter.
- \* 64 x oversampling ADC digital filter.
- \* 128 x oversampling DAC digital filter.
- \* CD-quality professional sound reality.

## APPLICATIONS

- \* Long time delay and repeat for moslem church.
- \* Fantastic Karaoke sound system for Asian.
- \* Very clean and bright echo feedback and delay for european karaoke vocal sound.
- \* Keyboard, guitar and combos.

# IV Panel Descriptions

## VM11S-DRV / VRM11S-DRV

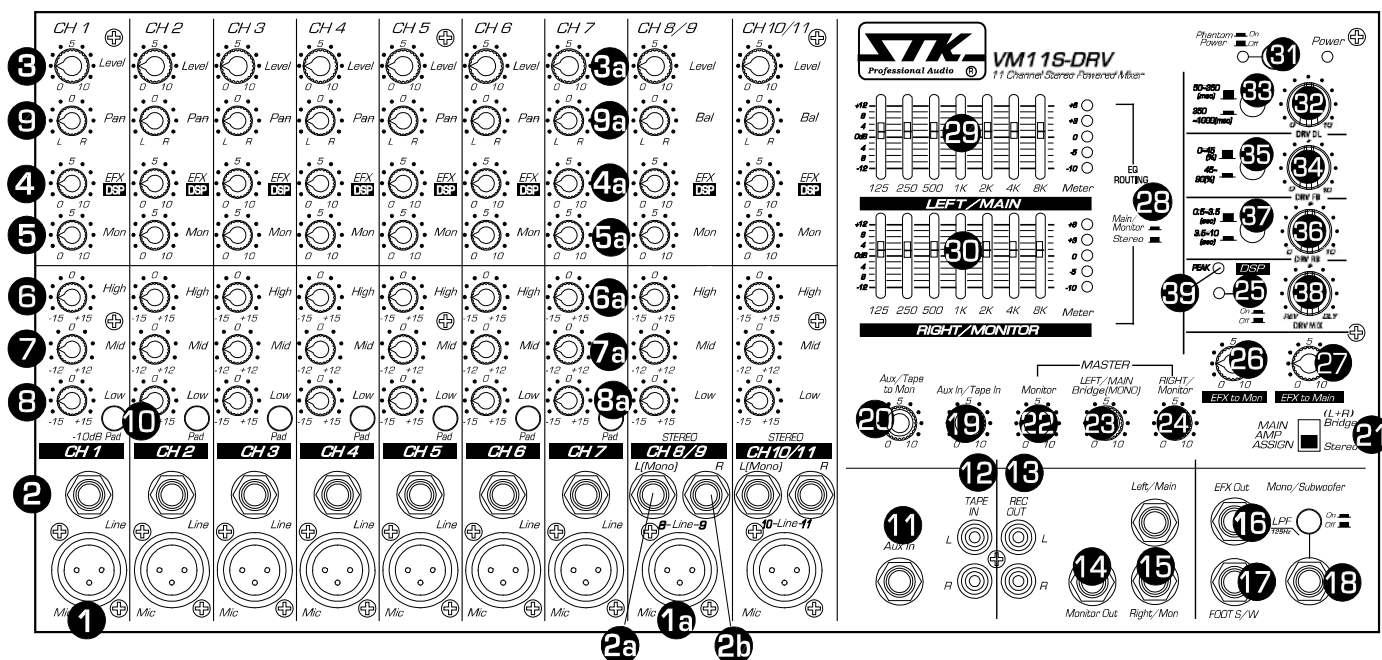

Note: The operation of the VM11S-DRV Stereo powered mixer is nearly identical. This manual will help you understand and get the most out of all VM mixers.

### MONO INPUT CHANNELS

#### 1. Mic In

This input accepts a standard XLR microphone connector and low impedance microphone.

#### 2. Line In

This input accepts a 1/4inch two conductor plug and is suitable for unbalanced line level sources.

#### 3. Level

The channel level control provides continuously variable adjustment of the channel output level to the main mixing buss

#### 4. EFX(DSP)

The channel Reverb/Effects control varies the amount of channel signal sent to the reverb or D.S.P, as well as to the effects send circuitry

#### 5. MON

This control varies the amount of signal sent to the monitor send circuitry.

#### 6. High

The high frequency shelf control is set at 8kHz. You can increase or attenuate frequencies 8kHz(and above)up to 15dB. There is a detente in the 0 position indicating a flat response.

#### 7. Mid

The mid frequency is centered at 2.5 kHz. You can increase or attenuate the midrange frequencies by as much 12 dB. A detente is provided in the 0 position indicating a flat response.

#### 8. Low

The low frequency shelf control is set at 80Hz. You can increase or attenuate frequencies 80Hz(and below) up to 15dB. A detente is provided in the 0 position indicating a flat response.

#### 9. PAN

This control varies the amount of channel signal sent to either the left of right channel of the stereo mixer.

#### 10. PAD

This switch attenuates the input signal by 10dB when connecting a line level device to channels 1-7, or if the mic input is distorted turn-this switch on (the pressed-in position)

### STEREO INPUT CHANNELS

In addition to the standard six mono input channels, the VM11S-DRV features two stereo input channels. Each of there stereo channels has two 1/4" line level inputs. The signal from the left 1/4" line level input is routed to the left output and the signal from right 1/4" line level input is routed the right output. The balance between these two inputs is controlled by the pan control.

#### 1a. Mic In

This input accepts a standard XLR microphone connector and low impedance microphone.

#### 2a, 2b. Line In

These channels may be used as monaural inputs by simply using the "odd channel" input(8 or 9), in which case the mono signal you put into the odd channel is fed to both odd and even stereo inputs.

#### 3a. Level

The channel level control provides continuously variable adjustment of the stereo channel's output level to the main output.

# Panel Descriptions

## 4a. EFX(DSP)

The channel EFX(DSP) control varies the amount of channel signal sent to the D.S.P, as well as to the effects send circuitry

## 5a. MON

This controls the amount of signal sent from an individual channel to both the Mon master control. In addition, this control also feeds the monitor send. This aux send is a pre channel level control and pre EQ. This means that the level sent from an individual input will not be affected by adjustment of the main channel level control or EQ settings and allows a completely separate mix for stage monitors.

## 6a. High

The high frequency shelf control is set at 8kHz. You can increase or attenuate frequencies 8kHz(and above) up to 15dB. There is a detente in the 0 position indicating a flat response.

## 7a. Mid

The mid frequency is centered at 2.5 kHz. You can increase or attenuate the midrange frequencies by as much 12dB. A detente is provided in the 0 position indicating a flat response.

## 8a. Low

The low frequency shelf control is set at 80Hz. You can increase or attenuate frequencies 80Hz(and below) up to 15dB. A detente is provided in the 0 position indicating a flat response.

## 9a. Bal

This control varies the amount of channel signal sent to either the left or right channel of the stereo mixer.

## FRONT PANEL MASTER SECTION

### 11. Aux In

Connect these jacks to the output jacks of an external effects processor.

If the effects processor has a stereo output, connect it to the AUX IN L(MONO) and R jacks. If it has monaural output, use the AUX IN L(MONO) jack. Signal input to these jacks is sent to the ST bus.

### 12. Tape In

Use these jacks to connect a stereo device, such as a cassette player or a CD player. The signals input to these jacks is sent to the ST bus.

### 13. Rec Out


The ST bus signal before it has passed through the MASTER control and graphic equalizer.

### 14. Monitor Out

The MONI bus signal which has passed through the MASTER control and graphic equalizer.

### 15. Left/Main, Right/Mon Out

The Left/Main and Right/Mon output 1/4" connectors are the final output for the master stereo mix and controlled by the master left and right controls.

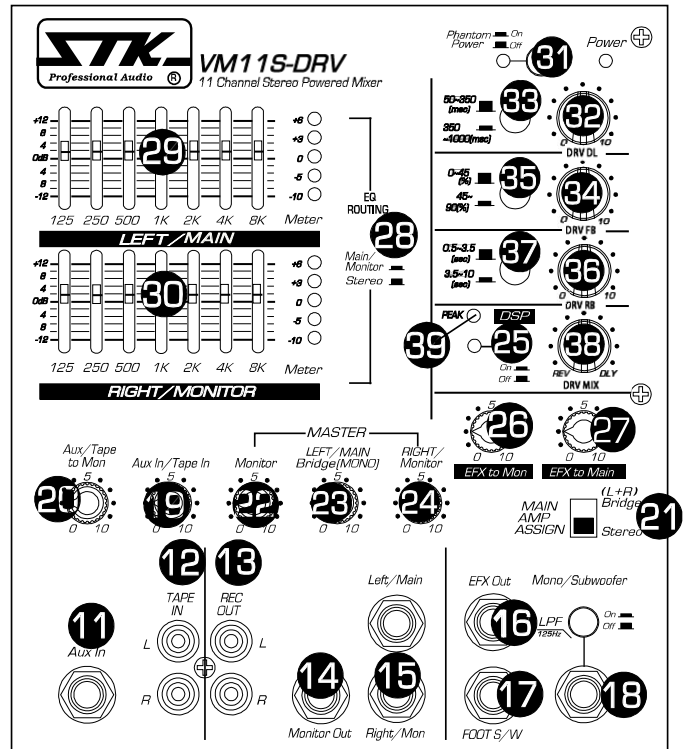

## 16. EFX Out

The input of an external effect such as a delay or echo can be connected to this jack. The signal adjusted by the EFFECT control of each channel will be sent to the EFFECT bus, its level adjusted by the EFFECT OUT control, and output from this jack.

## 17. Footswitch

The DSP Footswitch jack is a standard 1/4 " size accommodating a monaural ON/OFF Footswitch that enables/disables the internal digital effects.

## 18. Mono/Subwoofer

This line level subwoofer output allows you to conveniently add supplemental buss to your system. The signal is derived from summed left+right master output or the master output and is routed through a 125Hz low pass filter.

## 19. Aux In /Tape In Control

This control varies the amount of the signal from the Tape In and Aux In mixed back to the main buss.

## 20. Aux / Tape to Mon Control

The Aux/Tape to Mon Control provides continuously variable adjustment of the signal derived from the tape in jacks located on the connector panel and sends that signal to the monitor/aux master control.

## 21. Main Amp Assign (L+R/Bridge, Stereo)

This push button control routes either the main outputs left & right, through the left and right graphic EQ section or sends the main mono signal through the left graphic EQ section and a monitor mono signal through the right graphic EQ sections.

# Panel Descriptions

## 22. Master Monitor Control

This controls the overall signal level at the Monitor Line Out. This setting is output to both the front and rear panel monitor jacks and appears in the monitor bus signal.

## 23. Master Left/Main Bridge(Mono)

This control provides adjustment of signal to the left main output connector, and serves as a volume control for the left internal amplifier : **In Left+Right mode.**

## 24. Master Right/Monitor

This control provides adjustment of signal to the right main output connector, and serves as a volume control for the right internal amplifier : **In Monitor mode.**

## 25. DSP Switch

This push control activates/deactivates the DSP effects.

## 26. EFX To Mon

This master EFX control varies the amount of overall combined signal of the independent channels sent to the Mon EFX bus.

## 27. EFX To Main

This master EFX control varies the amount of overall combined signal of the independent channels sent to the Main EFX bus.

## 28. Main/Monitor, Stereo Switch

This push button control routes either the main outputs left & right, through the left and right graphic EQ section or sends the main mono signal through the left graphic EQ section and a monitor mono signal through the right graphic EQ sections.

## 29. Graphic Equalizer(Left/Main)

7 band graphic equalizers are provided on the front panel and may be used for stereo or Left /Main of VM11S-DRV, VRM11S-DRV.

## 30. Graphic Equalizer(Right/Monitor)

Two 7 band graphic equalizers are provided on the front panel and may be used for stereo or Right /Monitor of VM11S-DRV, VRM11S-DRV.

## 31. Phantom Power Switch

This push button control provides 48V of DC power to the independent channel XLR inputs for the use of condenser microphone without external battery.

## 32. Delay Time Adjust

This control adjusts the delay time .

## 33. Delay Time Range Select

This push control select delay time range from 50~350(msec) to 350~1000(msec).

## 34. Delay Feedback Adjust

This control adjusts the delay feedback.

## 35. Delay Feedback Range Select

This push control select delay feedback range from "0~45(%)" to "45~90(%)." .

## 36. Reverb Time Adjust


This control adjusts the reverb time.

## 37. Reverb Time Range Select

This push control select reverb time range from "0.5~3.5(sec)" to "3.5~10(sec)".

## 38. Reverb and Delay Mix Balance Adjust

This control adjust the reverb or delay mixing level

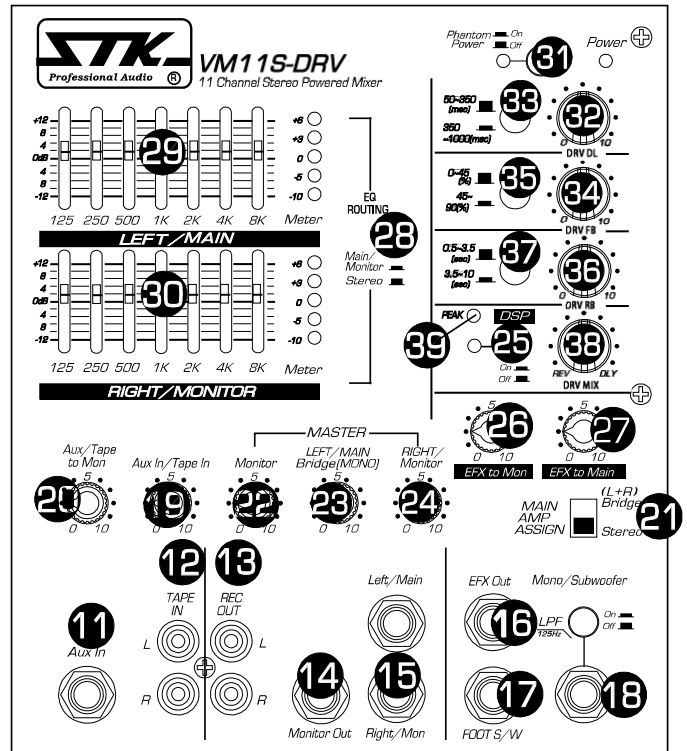

## 39. DSP Peak Indicator

### Digital Signal Processor Function and Features

The STK digital reverbs gives the power to create original sounds with a wide range of effects. Effect patch(effect setting) can be stored in the internal memory, calling up any patch is quick and easy by linear potentiometer.

### FEATURES


- \* Stereo-Effect preset available divided by potentiometer.
- \* Easy program selection methods.
- \* Automatic input audio signal "overshooting" indication circuit on-board.
- \* Usage of a 1M byte SRAM for superior quality stereo reverb and delay sound.
- \* Usage of the famous ASAHIKASEI 24bit DSP with built in 20 bit AD/DA stereo converter.
- \* 20bit delta sigma 64 x oversampling AD converter.
- \* 20bit delta sigma 128 x oversampling AD converter.
- \* 64 x oversampling ADC digital filter.
- \* 128 x oversampling DAC digital filter.
- \* CD-quality professional sound reality.

### APPLICATIONS

- \* Long time delay and repeat for moslem church.
- \* Fantastic Karaoke sound system for Asian.
- \* Very clean and bright echo feedback and delay for european karaoke vocal sound.
- \* Keyboard, guitar and combos.

# IV Panel Descriptions

## VM8-DRV/VRM8-DRV

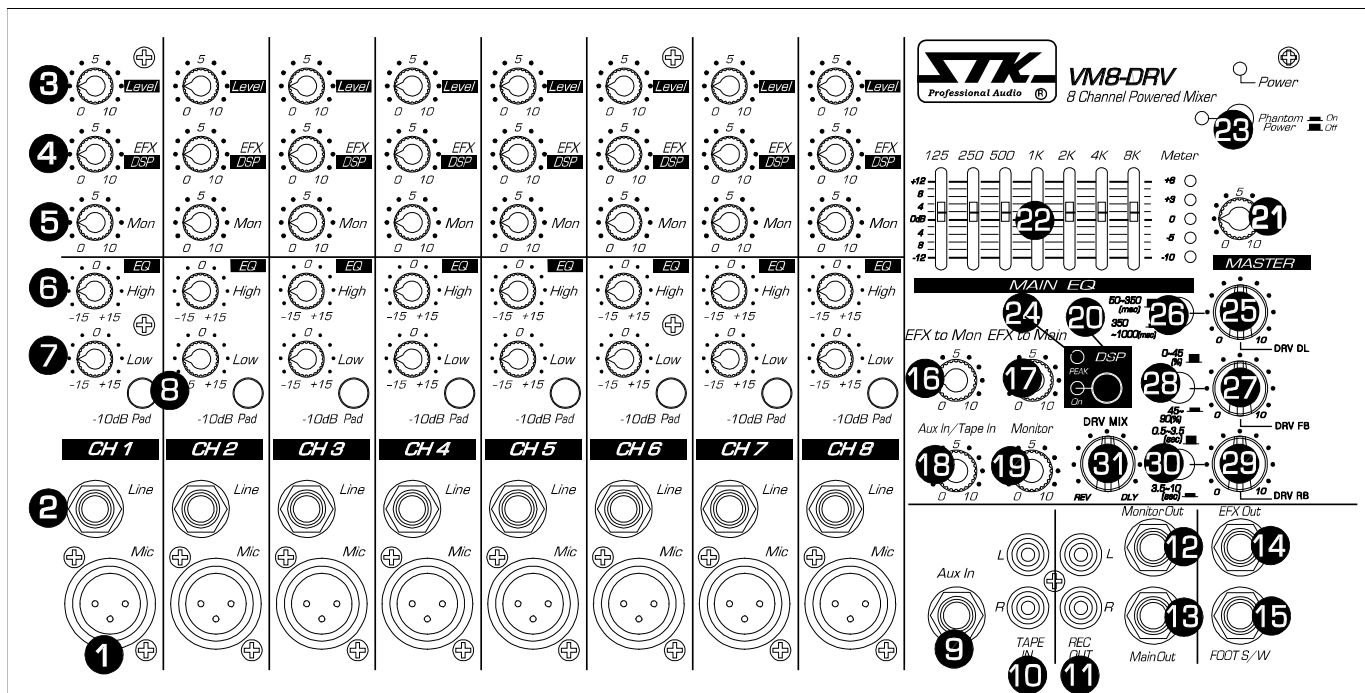

Note: The operation of the VM8-DRV/VRM8-DRV Mono powered mixer is nearly identical. This manual will help you understand and get the most out of all VM mixers.

### MONO INPUT CHANNELS

#### 1. Mic In

This input accepts a standard XLR microphone connector and low impedance microphone.

#### 2. Line In

This input accepts a 1/4 inch two conductor plug and is suitable for unbalanced line level sources.

#### 3. Level

The channel level control provides continuously variable adjustment of the channel output level to the main mixing buss

#### 4. EFX(DSP)

The channel Reverb/Effects control varies the amount of channel signal sent to the reverb or D.S.P, as well as to the effects send circuitry

#### 5. MON

This control varies the amount of signal sent to the monitor send circuitry.

#### 6. High

The high frequency shelf control is set at 10kHz. You can increase or attenuate frequencies 10kHz(and above)up to 15dB. There is a detente in the 0 position indicating a flat response.

#### 7. Low

The low frequency shelf control is set at 100Hz. You can increase or attenuate frequencies 100Hz(and below) up to 15dB. A detente is provided in the 0n position indicating a flat response.

#### 8. PAD

This switch attenuates the input signal by 10dB when connecting a line level device to channels 1-7, or if the mic input is distorted turn-this switch on (the pressed-in position)

### FRONT PANEL MASTER SECTION

#### 9. Aux In - Input to Main Jack

The Aux In - Input to Main phone jack is used to feed signals from an external source to the main bus and can be connected to the output of an external effects processor.

#### 10. Tape In - Input to Main Jacks

The Tape In - Input to main phone jacks are used to feed signals from an external source to the main bus and can be connected to the stereo outputs of a cassette, DAT, or MD deck.

#### 11. Rec Out - Output Jacks

The Rec Out - Output RCA jacks output the main bus signal prior to the 7-band graphic equalizer and master level control, and can be connected to the stereo inputs of a cassette, DAT or MD deck for recording.

#### 12. Monitor Out

The monitor output phone jack outputs the monitor bus signal after the monitor master control, and can be connected to the input of a powered monitor speaker.

#### 13. Main Out

The main output jack out the main bus signal after the 7-band graphic equalizer and master level control, and can be connected to the input of a larger mixer, or a more powerful amplifier.

# Panel Descriptions

## 14. EFX Out

The input of an external effect such as a delay or echo can be connected to this jack. The signal adjusted by the EFFECT control of each channel.

will be sent to the EFFECT bus, its level adjusted by the EFFECT OUT control, and output from this jack.

## 15. Footswitch

The DSP Footswitch jack is a standard 1/4 " size accommodating a monaural ON/OFF Footswitch that enables/disable the internal digital effects.

## 16. EFX To Mon

This master EFX control varies the amount of overall combined signal of the independent channels sent to the Moni EFX bus.

## 17. EFX To Main

This master EFX control varies the amount of overall combined signal of the independent channels sent to the Main EFX bus.

## 18. Aux In /Tape In Control

This control varies the amount of the signal from the Tape In and Aux In mixed back to the main buss.

## 19. Monitor Control

This controls the overall signal level at the Monitor Line Out. The control ranges from off through unity on up to +12dB of extra gain.

## 20. DSP Switch

This push control activates/deactivates the DSP effects.

## 21. Master Control

This Control adjusts the ST bus signal output level. This setting is output to the SPEAKERS L/R/L+R, Bridge jacks and the MAIN (STEREO) jack on the rear panel and appears in the ST bus signal.

## 22. Graphic Equalizer(Main)

7 band graphic equalizers are provided on the front panel and may be used for stereo Main of VM8-DRV.

## 23. Phantom Power Switch

This push button control provides 48V of DC power to the independent channel XLR inputs for the use of condenser microphone without external battery.

## 24. DSP Peak Indicator

## 25. Delay Time Adjust

This control adjusts the delay time.

## 26. Delay Time Range Select

This push control select delay time range from 50~350(msec) to 350~1000(msec).

## 27. Delay Feedback Adjust

This control adjusts the delay feedback.

## 28. Delay Feedback Range Select

This push control select delay feedback range from "0~45(%)" to "45~90(%)".

## 29. Reverb Time Adjust


This control adjusts the reverb time.

## 30. Reverb Time Range Select

This push control select reverb time range from "0.5~3.5(sec)" to "3.5~10(sec)".


## 31. Reverb and Delay Mix Balance Adjust

This control adjust the reverb or delay mixing level.

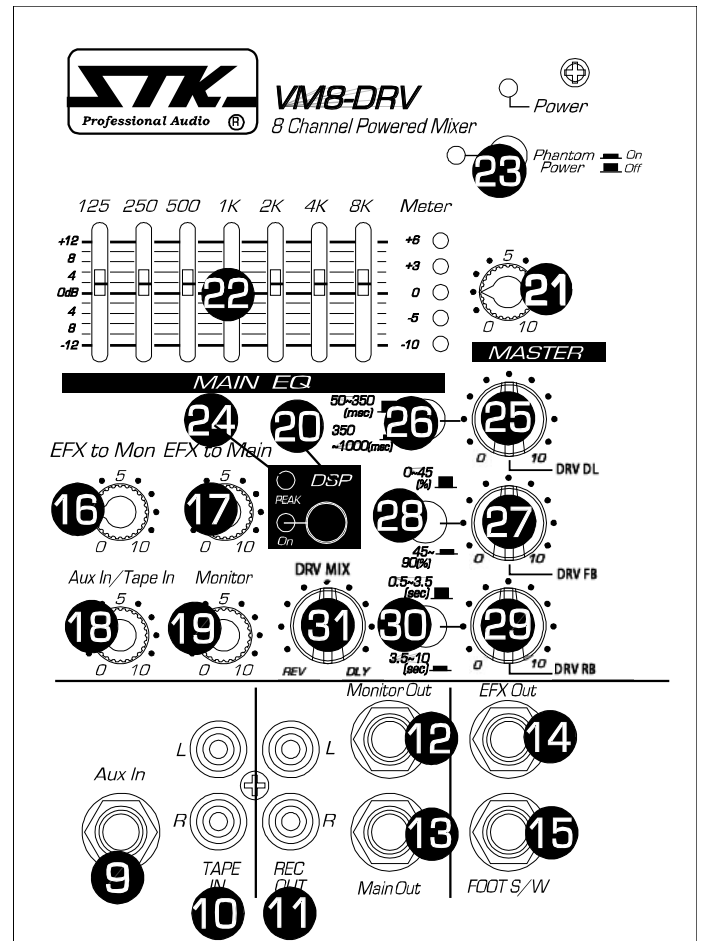

# Panel Descriptions

## REAR PANEL

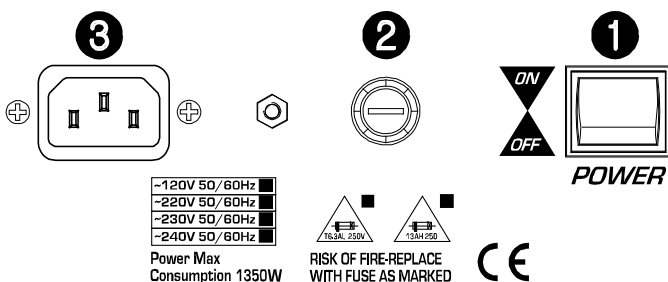

### 1. Power Switch

This switch controls the AC mains power to your powered mixer. Power is on when the switch is in the on(up) position and is confirmed when the power LED indicator is illuminated.

Note : Before turning on or off the mixer. It is a good idea to turn down the main master and monitor master controls.



### 2. FUSE

The fuse is located in the fuse holder. (See Section VIII Specifications for the correct values.)

### 3. IEC Socket

This is where you connect the supplied AC line cord to provide

AC power to the all VM series powered mixer. Plug the line cord into an AC socket properly configured for your particular model.

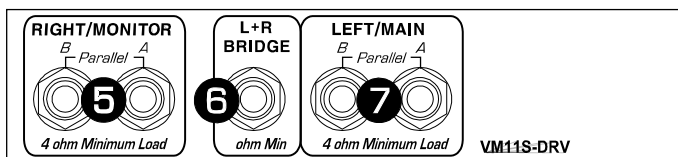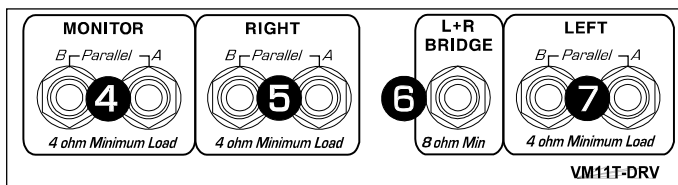

### 4. Monitor Out

These two parallel speaker output jacks accept standard 1/4 " two-conductor phone plugs, providing 300 watts of power at 4 ohms, or 200 watts at 8 ohms. Load impedances less than 2 Ohms will not draw additional power and may cause the unit to go into protect mode. The SPEAKERS MONITOR A and B jacks are internally connected in parallel, and output the same signals.

You can connect speakers with an impedance of 4-8ohm to either or both the A or B jacks. You can connect speakers with an impedance of 8-16ohm to both pairs.

**NOTE :** Do not connect any devices other than speakers to these jacks. Do not confuse these jacks with the MONITOR jacks on the I/O panel.

### 5. Right Out

These two parallel speaker output jacks accept standard 1/4 " two-conductor phone plugs, providing 300 watts of power at 4 ohms, or 200watts at 8ohms.

Load impedances less than 4 ohms will not draw additional power and may cause the unit to go into protect mode.

### 6. L+R Bridge

These two parallel speaker output jacks accept standard 1/4 " two-conductor phone plugs, providing 600 watts of power at 4 ohms, or 400watts at 8ohms.

Load impedances less than 4 ohms will not draw additional power and may cause the unit to go into protect mode.

### 7. Left Out

These two parallel speaker output jacks accept standard 1/4 " two-conductor phone plugs, providing 300 watts of power at

4 ohms, or 200watts at 8 ohms. Load impedances less than 4 ohms will not draw additional power and may cause the unit to go into protect mode.

### 8. VM8-DRV Power Amp output

These two parallel speaker output jacks accept standard 1/4 " two-conductor phone plugs, providing 300 watts of power at 4 ohms, or 200watts at 8 ohms. Load impedances less than 4 ohms will not draw additional power and may cause the unit to go into protect mode.

### ■ When the Stereo/Bridge select switch is set to STEREO (2-Channel connection)

L/R channel signals are routed from the ST(L,R) bus to the SPEAKER L/R jacks. The SPEAKERS L A/B jacks are internally

wired in parallel and output the same signals. You can connect a pair of speakers with an impedance of 4-8ohm to either or both the A or B pair of the SPEAKER L/R jacks(total of two speakers). You can connect two pairs of speakers with an impedance of 8-16ohm to both A and B pair or the SPEAKER L/R jacks(total of four speakers).

This connection provides a maximum output of 300W + 300W.

**NOTE:** Do not connect anything to the SPEAKERS L+R BRIDGE jack when you are using this 2-channel connection.

### ■ When the Stereo/Bridge select switch is set to L+R BRIDGE (BRIDGE connection)

L/R channel signals are mixed in the ST bus and routed to the SPEAKERS L+R BRIDGE jack as a monaural signal. You can connect only one speaker with an impedance of 8-16ohm to the SPEAKERS L+R BRIDGE jack. This connection provides the maximum output of 600W.

**NOTE:** Do not connect anything to the SPEAKERS L/R jacks if you use this BRIDGE connection.

# V Connecting Your System

## A. CONNECTORS

Your powered mixers uses several types of input and output connectors.

### 1. XLR Input jacks

Electronically balanced inputs accept a standard XLR male connector. Pin1=ground, pin2=hot or positive(+) and pin3=cold or negative (-) (see Figure 1). These connectors should be utilized for low impedance microphones. If you are using a high impedances microphone, it will likely have a cord with a 1/4 " connector on it. In this case, it would be appropriate to plug such microphones into a line input, however performance, and gain may be lessened. for best performance. We recommend you invest in one of the many higher quality, low impedance mics available on the market, or alternatively, purchase an impedance matching transformer from your dealer.

### 2. 1/4" Phone Input Jacks

These tip / sleeve jacks accept an unbalanced line level signal using a normal male phone plug. (See Figure 1.)

### 3. Speaker Output Jacks

The speaker output jacks are 1/4" two conductor jacks. Their power output and function are dependent upon the particular unit that you are using.

### 4. RCA Phone Jacks

The RCA jacks accept unbalanced male pin connectors.

## B. SYSTEM HOOKUPS


Before you begin your connections, you must decide how you will configure your sound system, mono or stereo. Below are system variations that can be used with your powered mixer. Carefully consider all of them to decide which system you will use.

**NOTE :** The VM Mixers feature flexible patching options which make possible more variations of setup than are presented here. Once familiarized with the unit's capabilities, you should be able to achieve practically any setup you desire.

### ■ Connecting monitoring speakers

You can connect one or two speakers to the SPEAKERS MONITOR jacks. Speaker impedance varies with the number of speakers that are connected. Be sure to maintain speaker impedance at the specified value or higher. Refer to the figure below.

*Connecting one speaker:*

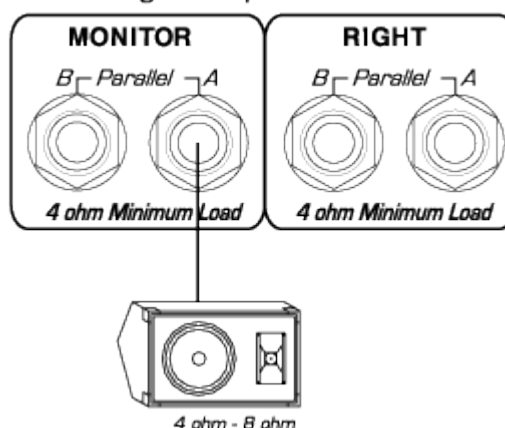

*Connecting one speaker:*



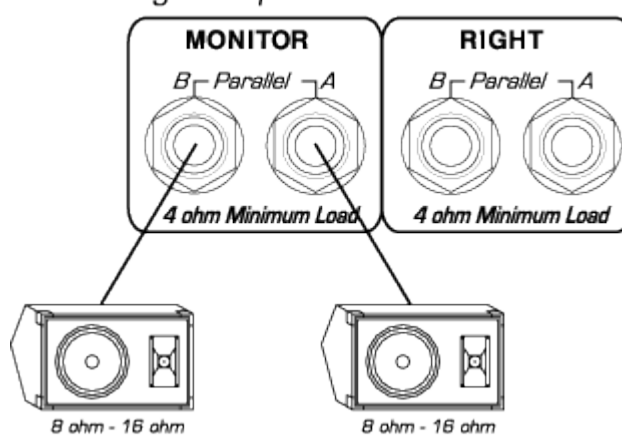


Figure-1

### a. Female Three Pin Connector

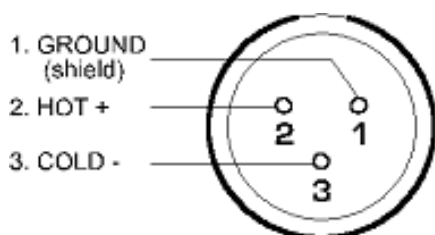

### b. Unbalanced 1/4" Connector


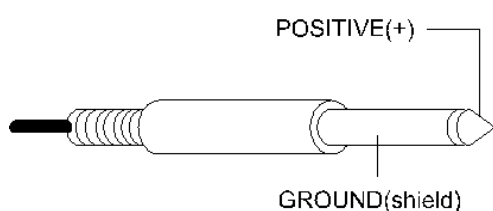


# Connecting Your System


## ■ Connecting main speaker

If you select the two connection, the speaker connect to the SPEAKER L/R jacks and select the BRIDGE connection, The speaker connect to SPEAKERS L+R BRIDGE jacks. Depend on the number of connected speakes And the type of connection, speaker impedance requirements vary. Be sure maintain speaker impedance value or higher. Refer to the below.

### Two-Channel Connection

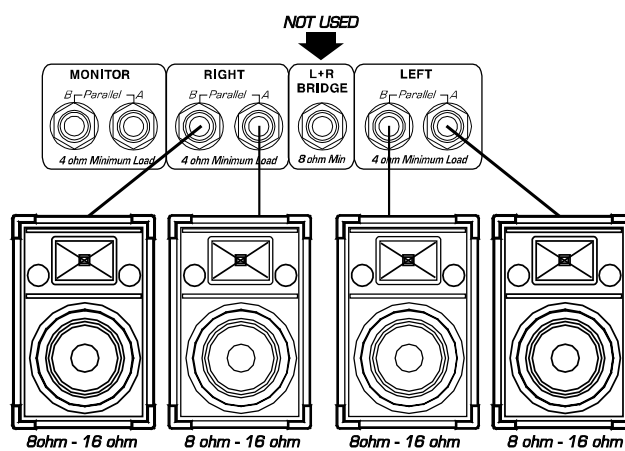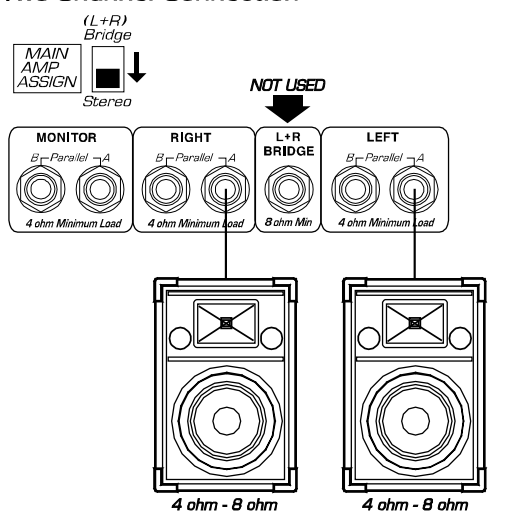

### Bridge Connection

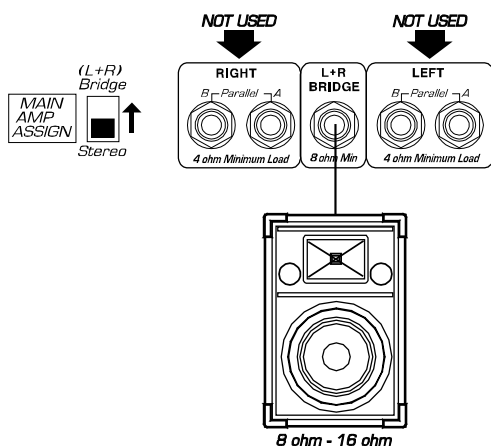

# Connecting Your System

## 1. Powered Mono

The most basic setup: one or more input devices such as a microphone keyboard, CD player, or Tape deck, an optional external effects, processor one of more speaker systems connected in parallel to the main output jack; Addition of an externally powered monitor system.

## 2. Powered Stereo

The basic stereo setup: One or more input devices such as a microphone, keyboard, CD player, or tape deck: An optional external effects processor: One or more parallel speaker systems connected to each of the left and right sides of the output operating in stereo : Addition of an externally powered monitor system.

## Powered Mono

Now that you have decided which mode and type of system operation you will use, You are ready to make your system connections and settings on your VM Mixer.

### 1. Switch everything to OFF.

This includes your VM mixer and all devices in the system.

### 2. Set the EQ Assign switch to the out position.

This makes the equalizer affect the master output.

### 3. Connect the input devices into the six or eight input channels.

Group your microphone channels and instrument channels to make mixing easier.

### 4. Connect the tape and/or CD player.

If you are feeding a signal from a tape or CD player into your mixer, using a stereo RCA cable, Connect the output jacks of the tape or CD player to the tape in jacks of your mixer. If you wish to record the output of your mixer, Using a stereo RCA cable, Connect the tape out jack of your mixer to the input jacks of the tape player.

### 5. Connect the external effects device.

If you are utilizing an external effects device, using standard 1/4" shielded cables, Connect the Aux send jack of your mixer to the input jack of the effects device and connect the output jack of the effects device to the Aux Return jack of your mixer.

### 6. Connect the speakers.

Using heavy gauge unshielded 1/4" speaker cables, connect your main speaker systems to the parallel speaker output jacks on the rear panel of your powered mixer. The total speaker impedance load of your speaker systems must be 4 ohms or greater.

If you are not certain of your total speaker impedance load, contact your dealer for assistance.

***WARNING: Operating your VM power mixer at an output impedance less than 2 ohms can damage your unit and void your warranty!***

## Powered Stereo

### 1. Switch everything to OFF.

This includes your VM mixer and all devices to be connected.

### 2. Set the AMP/EQ Assign Switch to the stereo(out) position.

### 3. Connect the input devices into the six input channels.

Group your microphone channels and instrument channels to make mixing easier.

### 4. Connect the input devices into the two Stereo input channels:

Using standard 1/4" shielded cables, connect the desired devices into the stereo input channels:

Keyboards, drum machines, tape programs etc.

### 5. Connect the tape and/of CD player.

If you are feeding a signal from a tape or CD player into your mixer, using a stereo RCA cable, Connect the output jacks of the player to the tape in jacks of your mixer. If you wish to record the output of your mixer, using a stereo RCA cable, connect the tape out jack of your mixer to the input jacks of the tape recorder.

### 6. Connect the external effects device.

If you are utilizing an external effects device, using standard 1/4" shielded cables, connect the Aux send jack of your mixer to the input jack of the effects device and connect the output jack of the effects device to the Aux Return jack of your mixer.

### 7. Connect the speakers.

Using heavy gauge unshielded 1/4" speaker cables, connect your Left main speaker systems to the two parallel left/main speaker output jacks on the rear panel of your powered mixer; Connect your right main speaker systems to the two parallel right/monitor speaker output jacks on the rear panel of your powered mixer. The total speaker impedance load of your speaker systems connected to each side of your mixer must be 2 ohms or greater.

If you are not certain of your total speaker impedance load, contact your dealer for assistance.

***WARNING: Operating your VM powered mixer at an output impedance less than 2 ohms/side can damage your unit and void your warranty!***

### 8. Connect the external Monitor Equalizer.

If you are utilizing an external graphic equalizer for the monitors, using a standard 1/4" shielded cable, Connect the monitor out jack on your mixer to the input jack of your external monitor equalizer.

### 9. Connect your external Monitor Power Amp.

If you are utilizing an external equalizer for the monitors(No.8) using a standard 1/4" shielded cable, connect the output jack of your monitor equalizer to the input jack of your monitor power amp. If you are not using an external monitor equalizer, connect the monitor out jack on your mixer directly to the input jack of your monitor power amplifier.

# VI Operating Your System

## 10. Connect the Monitor speakers.

Using heavy gauge unshielded 1/4" speaker cables, connect your monitor speakers to the output jacks of the monitor power amplifier. make sure that the total impedance load of your monitor speakers is not less than the recommended minimum impedance that your monitor power amp can safely handle.

## A. MONITOR OPERATION

The idea behind a monitor system is to provide a completely independent mix of your input signals to your monitor speakers so that the performers can hear what they are doing and perform their best.

Because of speaker placement, program material, and several other factors, it is rare that the monitor mix will be the same as the main mix.

### 1. Set the Master Level Control to Zero.

Since the monitor mix is completely separate from the main mix, all of the monitor settings will be initially made with the master level control set to the zero position.

### 2. Set the Monitor Level Control to Zero.

### 3. Set the input Level of the External Monitor Equalizer(if applicable).

If you are using a separately powered monitor system, set the input level control of the equalizer to about 60%. you will need to check this setting later to be sure there is no clipping or distortion.

### 4. Set External Monitor Amplifier(if applicable).

If you are using a separately powered monitor system, set the input level control of the external amplifier to about 60%. you will need to check this setting later to be sure there is no clipping or distortion.

### 5. Set the master Monitor Level Control.

Set the monitor level control to 4. you will likely have to re-adjust this later, but for now, this setting will allow you to hear your monitor system and decide what further adjustments are necessary.

### 6. Set the channel Monitor Controls.

Decide which channels you want to include in the monitor mix. set a nominal level on each of these channels using the channel monitor control. Slowly raise the level on each individual channel until the optimum volume is achieved or, in the case of a microphone channel. until you begin to hear feedback. If you start to hear feedback, quickly reduce the monitor control of that channel back to 0 or until the feedback stops. Carefully raise the control again, stopping before the point at which you experienced feedback.

### 7. Adjust the Monitor Equalizer.

Make any adjustments necessary in the monitor equalizer. If you are using a separately powered monitor system, you will adjust the external monitor equalizer. If you are using the VM11S-DRV in the Main+Monitor Mode, the lower equalizer on the mixer controls the monitors

## 8. Make final adjustments to the monitor system.

After you have properly set the graphic equalizer, Make any further adjustments to the monitor system that are necessary. When you have completed all adjustments to the monitor system, you can raise the level of the master control for the main system.

## B. GRAPHIC EQUALIZER USE

The VM8-DRV is equipped with a single 7-band equalizer that cab be configured to affect either master output of main output. The VM11S-DRV/VRM11S-DRV is equipped with two 7-band equalizers that can be configured to affect either left/main outputs or right/monitor outputs.

The VM11T-DRV/VRM11T-DRV is equipped with three 7-band equalizers that can be configured to affect either left outputs or right outputs or monitor outputs.

You should think of the graphic equalizer as an extended "Tone Control." the built-in graphic equalizer(s) divide the audio spectrum into 9 segments or bands. you can raise or lower the level of each individual band by adjusting the slider on that band. Any environment has its own set of acoustics, even outdoors. Some environments will reflect or absorb certain frequencies more than others. a graphic equalizer allows you to attenuate ranges of frequencies that are too strong and boost others that are too weak, or, in other words, to "Equalize" the seven different bands in their relationship to each other.

## C. PROTECTION CIRCUIT

The protect LED indicates that there is a problem either in the amplifier's external connections, load or temperature conditions or it's internal functions.

If one of these situations occurs, the amplifier senses the problem and automatically switches into its "Protect Mode". The LED will light to warn you of the trouble and the amplifier will stop working.

If the LED lights and stays on, switch the unit off.

If you feel that you have been able to correct the fault condition that caused the unit to go into the protect mode, switch the mixer on again.

If you have successfully removed the fault condition, the amplifier will run normally.

***Caution : If the protect LED remains lit when attempting to resume operation, DO NOT USE THE UNIT. Take your VM Mix to an authorized service facility or contact your dealer for help.***

# Operating Your System

## **D. CARE AND MAINTENANCE**

Your VM Mix is built to provide years of dependable service under demanding circumstances. It requires no internal maintenance but a common sense approach to its use will help you enjoy long and reliable operation.

Here are some tips:

### **1. Power Requirements**

Your powered mixer is capable of 110-120V AC or 220-240V AC operation allowing world-wide usage.

It is pre-wired at the factory for the correct voltage in your country. It is possible to change the mains voltage but it is an internal operation that can only be performed by an experienced technician.

Contact your dealer or service center for more information.

### **2. Periodic Cleaning**

Keep the unit clean by wiping frequently with a damp, soft cloth. Use a mild detergent cleaner if necessary, Applied to the cloth, but not directly to the mixer. Do not use solvents or the other chemicals to clean the unit. A large(dry) paint brush is useful to remove cumulated dust from between the many control knobs on the mixer.

If you accidentally spill liquid onto or into the unit, disconnect the power cord and allow the unit to dry thoroughly before attempting to use it.

### **3. Connecting Cables**

Use only high quality connecting cables with your VM mixer. Faulty or suspicious cables should be replaced to avoid possible deterioration of your sound quality.

### **4. Connections**


Check cable connections frequently, if you move your equipment often, check input and output jack condition to be sure they have not sustained any transportation damage, in temporary installations, such as live performances, check all cable connections before each performance In permanent installations, verify the operation of all cables and connections often.

It is much easier to deal with a poor cable or connection before a performance or recording session than during it.

# VII System Hookup Diagram

As a band with VM11T-DRV


Here is an example of using the VM11T-DRV as a compact system for a band.

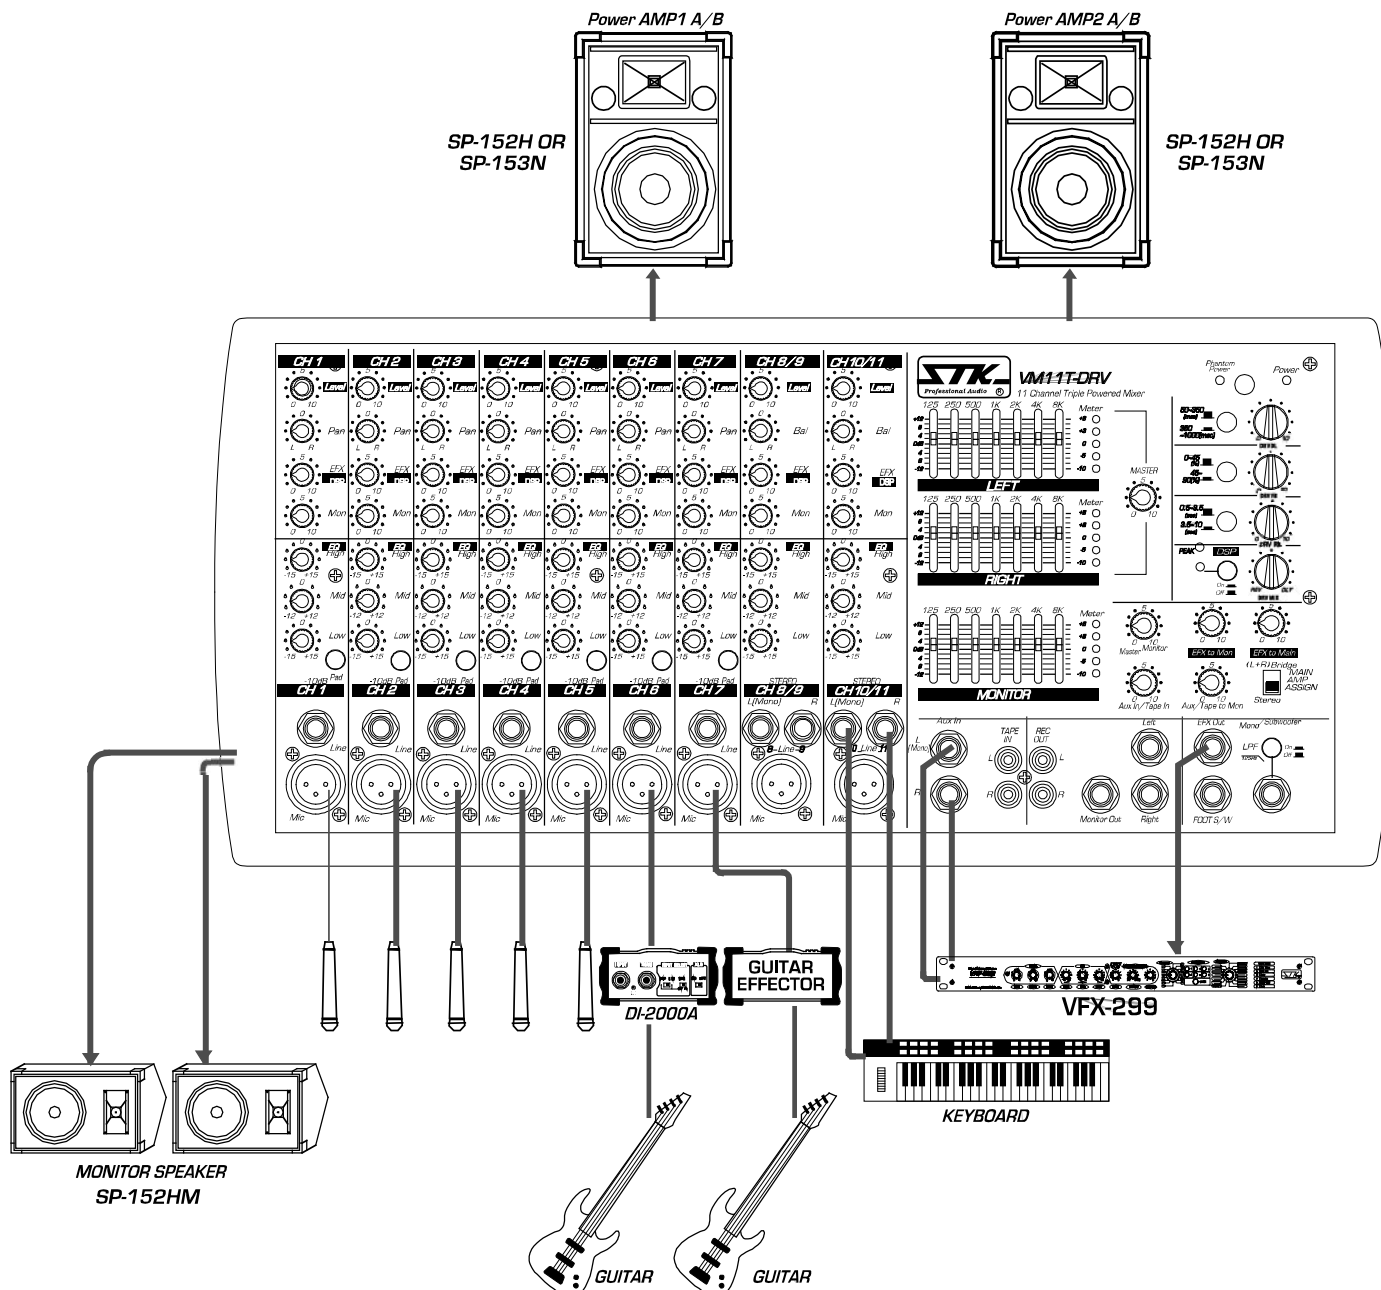

# System Hookup Diagram

As a band with VM11S-DRV


Here is an example of using the VM11S-DRV as a compact system for a band.

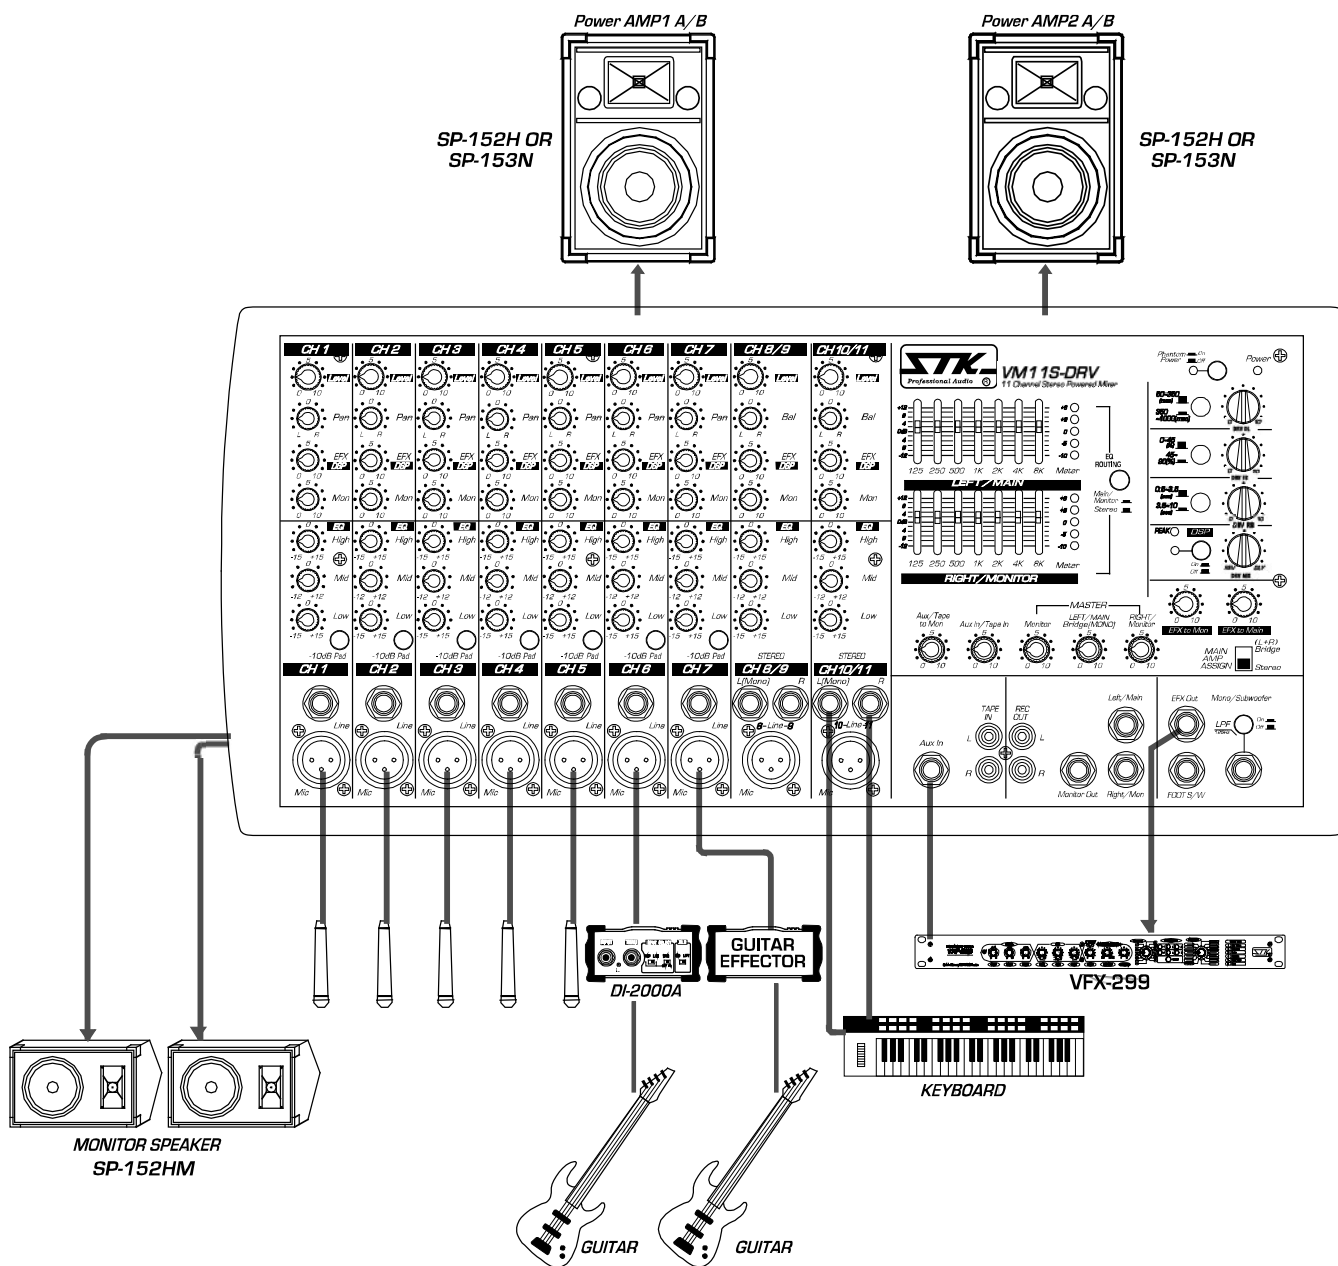

# System Hookup Diagram


As a band with VM8-DRV

Here is an example of using the VM8-DRV as a compact system for a band.

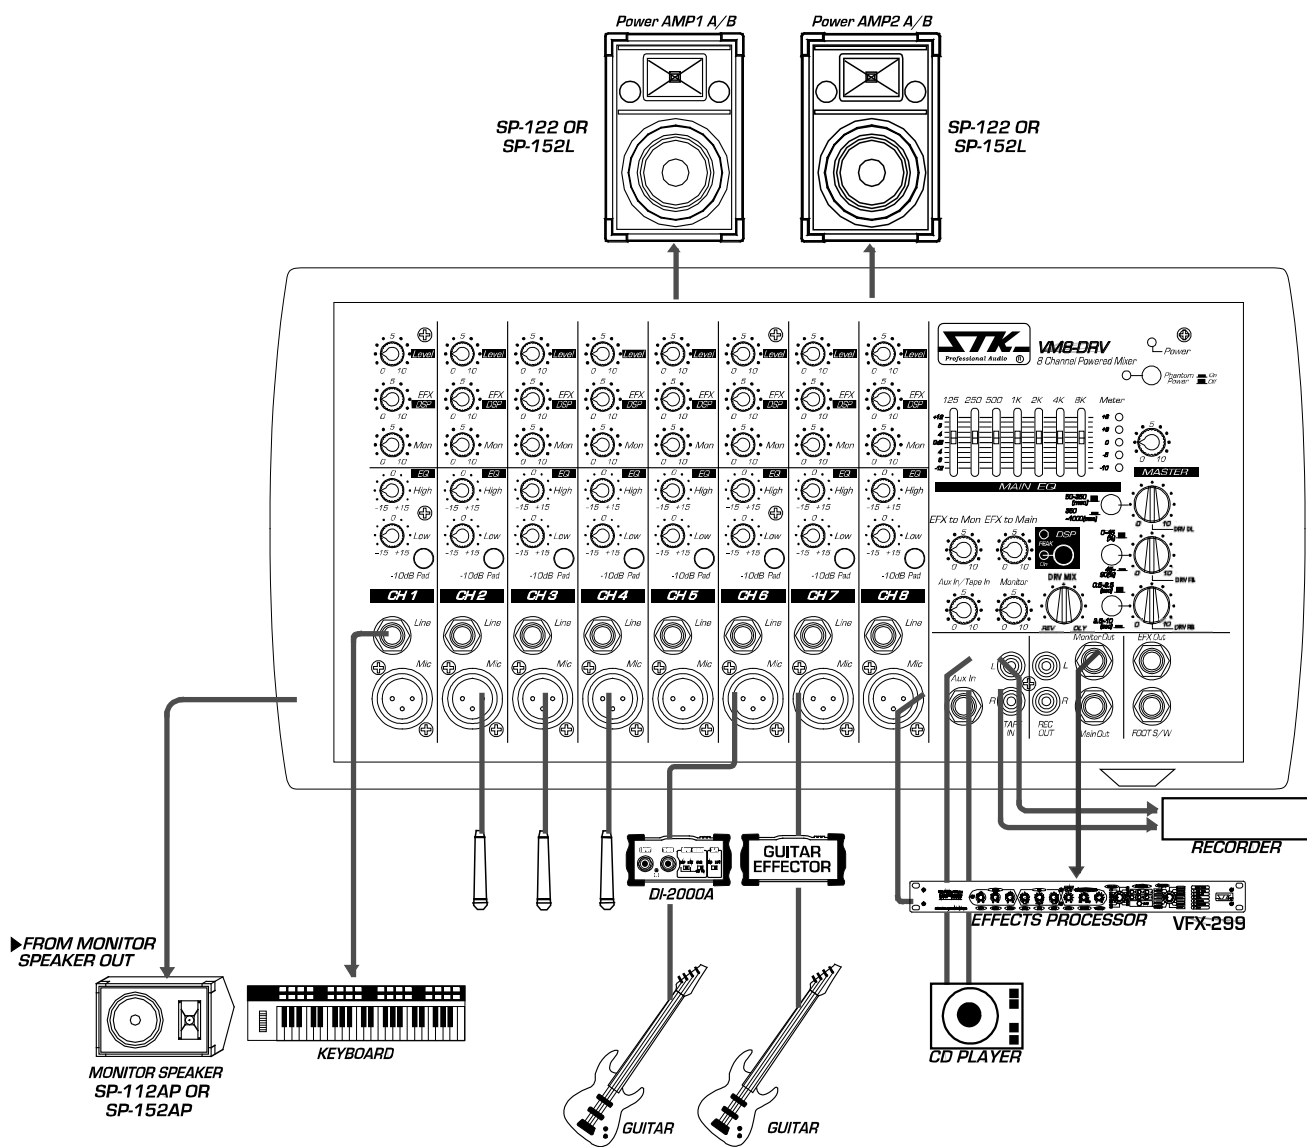


# VIII Block Diagram

VM8-DRV

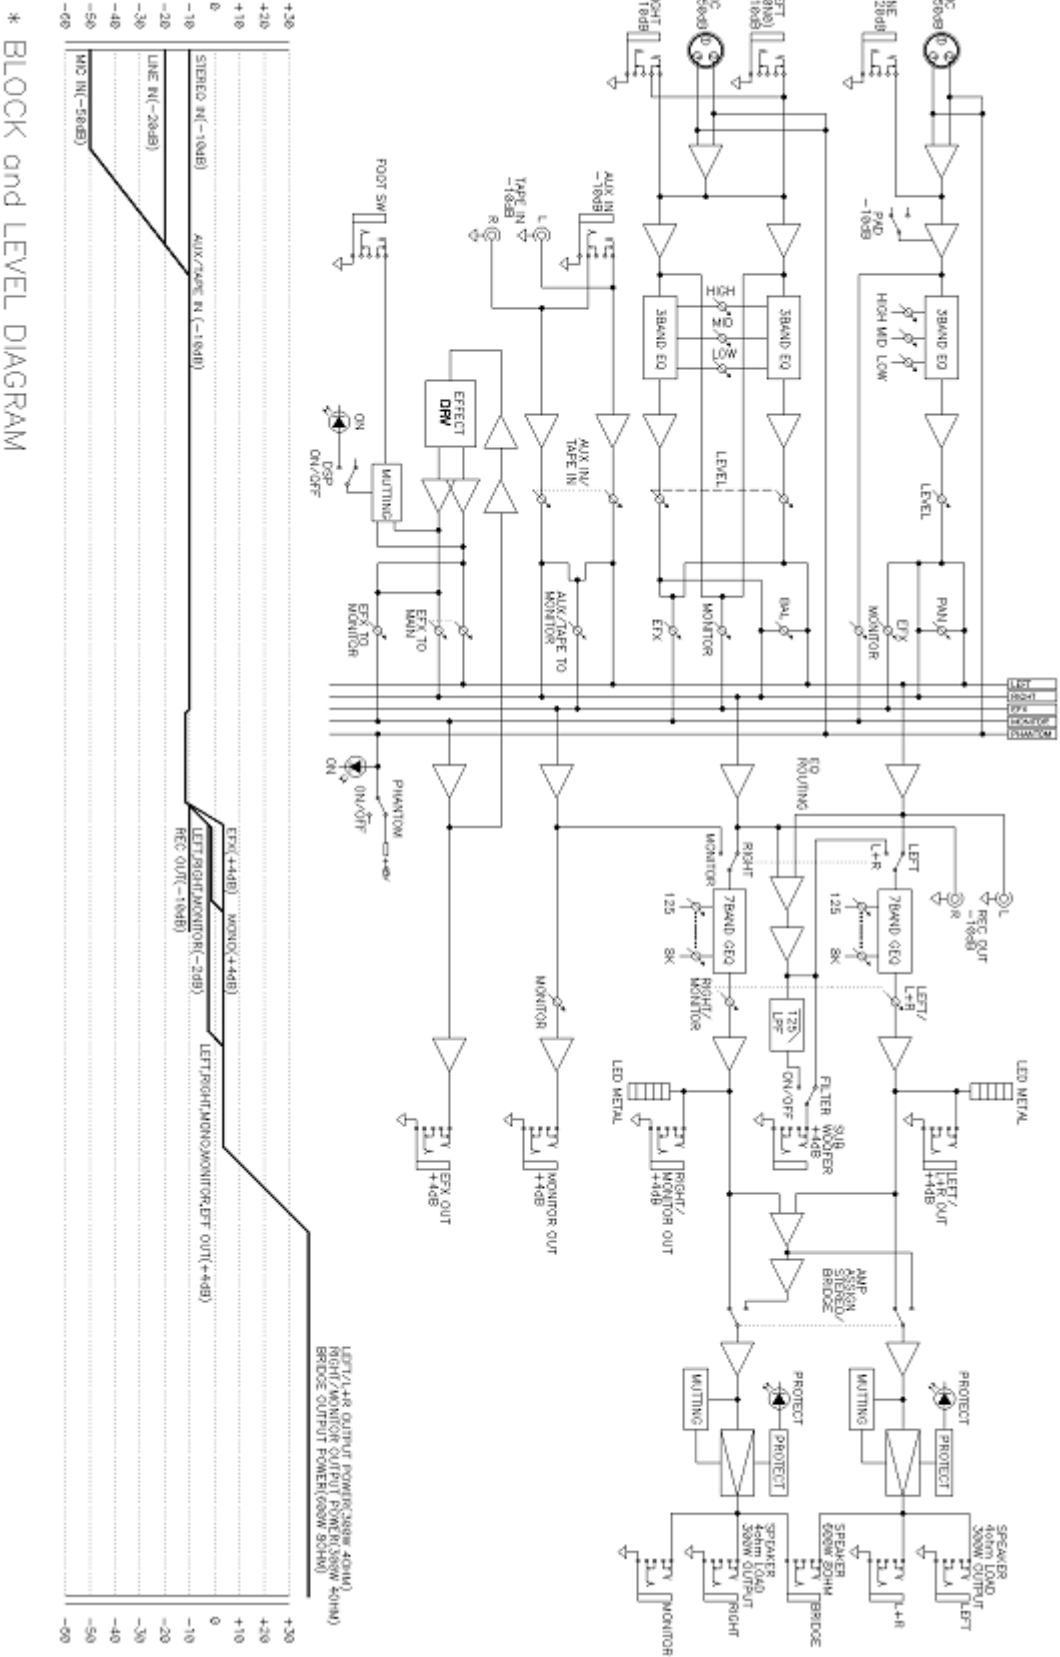



VM11T-DRV / VRMT-DRV

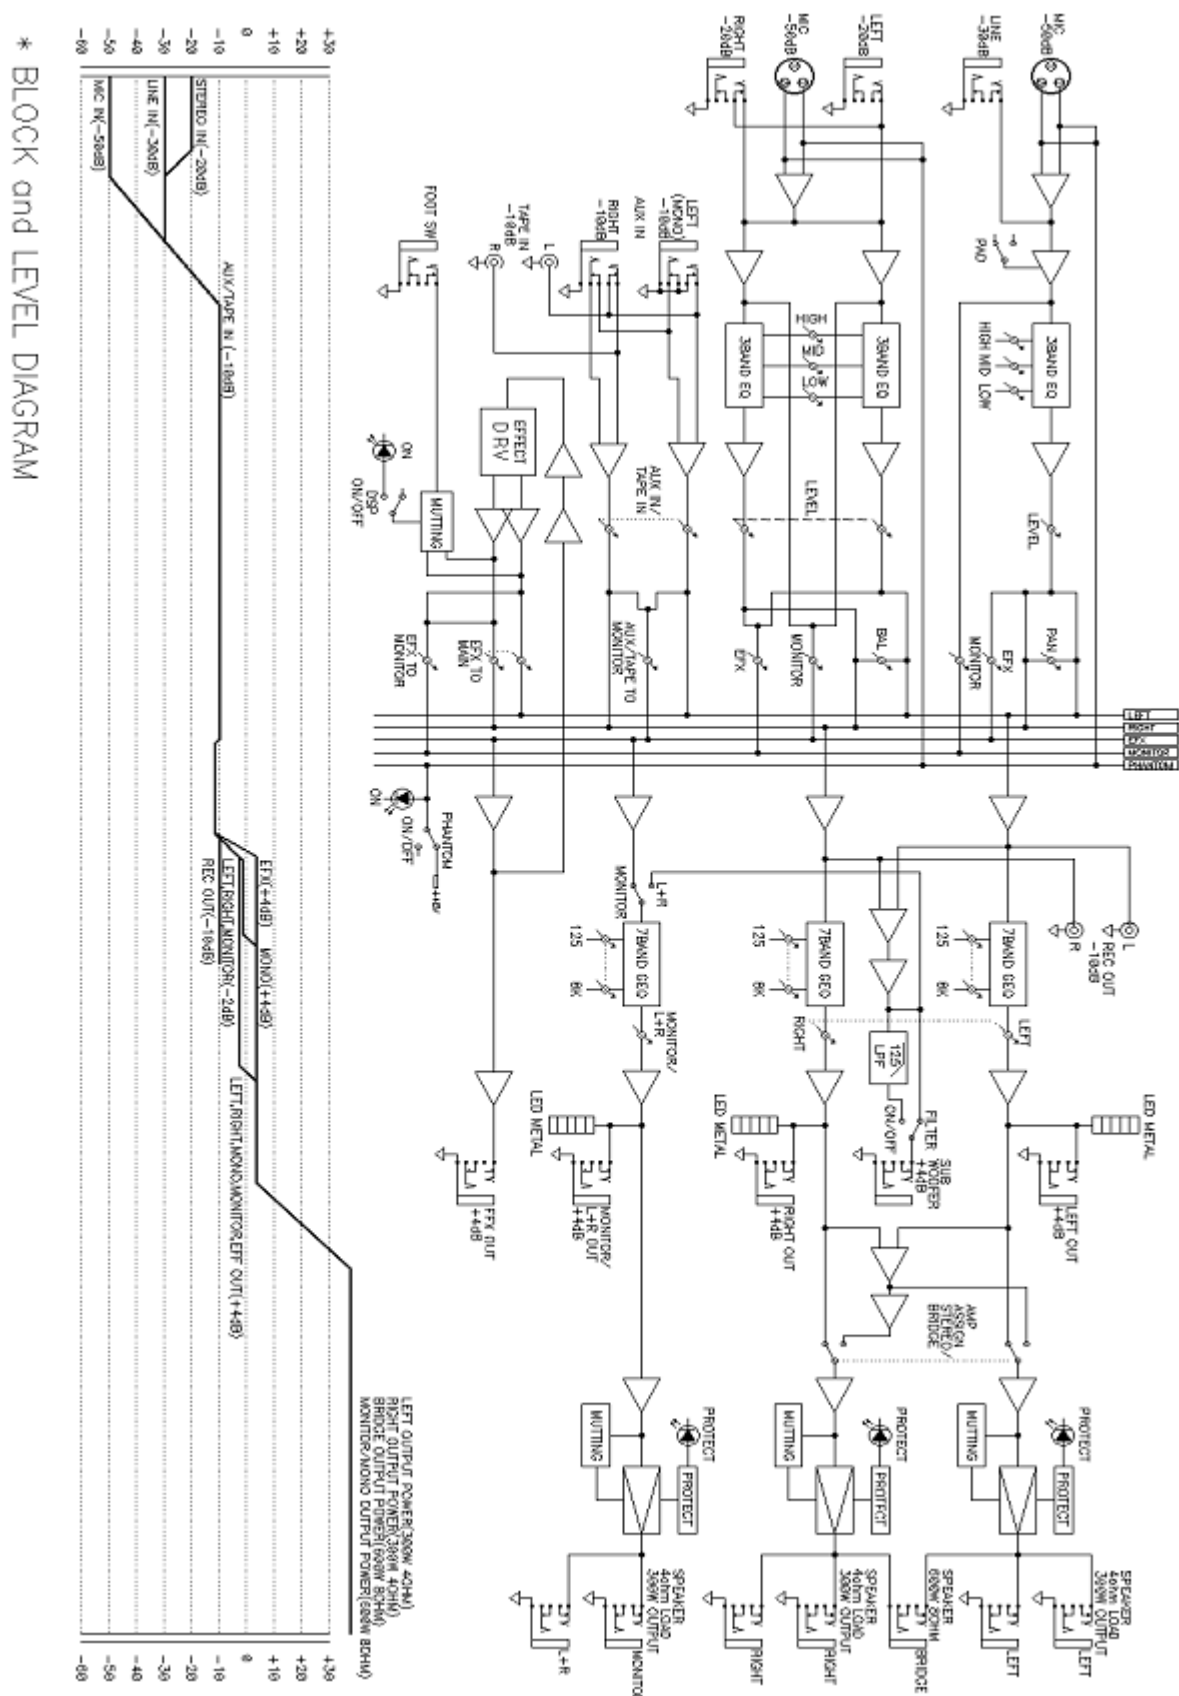

# IX Specifications

## ■ General Specifications

MODEL	VM8-DRV / VRM8-DRV
<b>Power Output Level(EIA)</b> RL 4Ω RL 8Ω	300W 200W
<b>Total Harmonic Distortion</b> f=1kHz, Rated output RL 4Ω Rated output RL 8Ω Main output +4dB m/600Ω	0.05% 0.05% 0.08%
<b>Frequency Response</b> 20Hz ~ 20kHz, 8Ω, 1 watt(Speaker Out) CH IN to Main OUT @+4dB m	+1, -2dB +1, -2dB
<b>Hum and Noise</b> 20Hz ~ 20kHz, Rs=1500Ω (With 20Hz~20kHz BPF)	-110dB Equivalent input noise -70dB Residual output noise (SP OUT) -88dB Residual output noise (MAIN OUT)
<b>Cross Talk</b>	60dB at 1kHz, adjacent channel inputs. 60dB at 1kHz, Input to Output.
<b>INPUT CHANNEL Equalization</b> +,- 15dB shelving +,- 15dB shelving	High : 10kHz Low : 100Hz
<b>Graphic Equalization</b>	±12dB maximum boost or cut in each of seven bands. 125, 250, 500, 1K, 2K, 4K, 8K
<b>Protection circuit</b>	Short circuit current limit DC protection at speaker output Power ON/OFF transient AC line fuse.
<b>Indicators</b>	Power(Green) Phantom(Amber) DSP(Yellow) 5 Points LED Meter (-10, -5, 0, +3, +6dB) Main Out
<b>DC offset voltage</b>	≥ DC10 mV
<b>Dimension (W<sub>i</sub>×D<sub>i</sub>×H)</b>	413X256X222 mm
<b>Weight(Net)</b>	23.77 lbs/ 10.78kg
<b>Power Consumption</b>	500W FUSE 100V ~ 120V.....6.3A 220V ~ 240V...T.3.15A
<b>Connector</b>	Bal XLR input Unbal 1/4" input Unbal 1/4" output

**NOTE:** (1) Sensitivity is the lowest level that will produce a full power output, or the nominal output level when the unit is set to maximum gain.

(2) XLR connectors are balanced. Phone jacks are unbalanced.

# Specifications

## ■ General Specifications

MODEL	VM11S-DRV / VRM11S-DRV	VM11T-DRV / VRM11T-DRV
<b>Power Output Level(EIA)</b> RL 4Ω RL 8Ω	2 x 300W 2 x 200W	3 x 300W 3 x 200W
<b>Total Harmonic Distortion</b> f=1kHz, Rated output RL 4Ω Rated output RL 8Ω Main output +4 dB m/600Ω	0.05% 0.05% 0.08%	
<b>Frequency Response</b> 20Hz ~ 20kHz, 8Ω, 1 watt CH In to Main Out @+4dB m	+1, -2dB +1, -2dB	
<b>Hum and Noise</b> 20Hz ~ 20kHz, Rs=1500Ω	-110dB Equivalent input noise -70dB Residual output noise (SP OUT) -97dB Residual output noise (MAIN OUT)	
<b>Cross Talk</b>	60dB at 1kHz, adjacent channel inputs. 60dB at 1kHz, Input to Output.	
<b>Equalization</b> +,- 15dB shelving +,- 12dB peaking +,- 15dB shelving	<u>Stereo</u> High : 12kHz Mid : 2.5kHz Low : 80Hz	<u>Triple</u> High : 12kHz Mid : 2.5kHz Low : 80Hz
<b>Graphic Equalization</b>	¾12dB maximum boost or cut in each of seven bands. 125, 250, 500, 1k, 2k, 4k, 8k	
<b>Protection circuit</b>	Short circuit current limit DC protection at speaker output Power ON/OFF transient AC line fuse	
<b>Indicators</b>	Power (Green) Dsp (Yellow), DSP PEAK (RED) Phantom (Amber)	
<b>DC offset voltage</b>	≥ DC10 mV	
<b>Dimension (W<sub>i</sub>xD<sub>i</sub>H)</b>	482X276X238 mm / 430X260X205 mm	482X276X238 mm / 430X260X205 mm
<b>Weight(Net)</b>	33.51 Ibs(15.20 kg) / 31.83Ibs(14.44 kg)	33.73 Ibs(15.30 kg) / 32.05 Ibs(21 kg)
<b>Power Consumption</b>	900W FUSE 100V ~ 120V.....13A 220V ~ 240V....T6.3A	1350W FUSE 100V ~ 120V.....13A 220V ~ 240V....T6.3A
<b>Connector</b>	Bal XLR input Unbal 1/4" input Unbal 1/4" output	Bal XLR input Unbal 1/4" input Unbal 1/4" output

**NOTE:** (1) Sensitivity is the lowest level that will produce a full power output , or the nominal output level when the unit is set to maximum gain.  
(2) XLR connectors are balanced. Phone jacks are unbalanced.

### ♪ Input specifications.

<i>Input terminals</i>	<i>Actual Load Impedance</i>	<i>For use with nominal</i>	<i>Input level</i>			<i>Connector in mixer</i>
			<i>Sensitivity</i>	<i>Nominal (LIMIT)</i>	<i>Max. before clip(Main Out)</i>	
<b>MIC IN (1-8) LOW IMPEDANCE</b>	4 kohms	600 ohms mic	-50 dBu (2.45 mV)	$i^{3/41}$ dB	-34 dBu (15.5 mV)	XLR Jack
<b>LINE IN (1-8) LOW IMPEDANCE</b>	4 kohms	600 ohms mic	-20 dBu (109.5 mV)	$i^{3/41}$ dB	5 dBu (1.3 V)	Phone Jack
<b>AUX IN</b>	10 kohms	600 ohms lines	-10 dBu (245.0 mV)	$i^{3/41}$ dB	6 dBu (1.5 V)	Phone Jack
<b>TAPE IN</b>	10 kohms	600 ohms lines	-10 dBu (245.0 mV)	$i^{3/41}$ dB	6 dBu (1.5 V)	RCA Jack

**NOTE:** (1) Sensitivity is the lowest level that will produce a full power output, or the nominal output level when the unit is set to maximum gain.

(2) XLR connectors are balanced. Phone jacks are unbalanced.

### ♪ Output specifications.

<i>Output terminals</i>	<i>Actual Load Impedance</i>	<i>For use with nominal</i>	<i>Output level</i>		<i>Connector in mixer</i>
			<i>Nominal</i>	<i>Max. before clip</i>	
<b>SPEAKER OUT</b>	0.08 ohm	4 ohms SP	300 W	314 W	Phone Jack
		8 ohms SP	200 W	200 W	Phone Jack
<b>MAIN OUT</b>	600 ohm	100k ohms lines	+4dBu (1.2 V)	+20 dBu (8.3 V)	Phone Jack
<b>MONITOR OUT</b>	600 ohm	100k ohms lines	+4dBu (1.2 V)	+20 dBu (8.3 V)	Phone Jack
<b>EFX OUT</b>	600 ohm	100k ohms lines	+4dBu (1.2 V)	+20 dBu (8.3 V)	Phone Jack
<b>TAPE OUT</b>	600 ohm	100k ohms lines	-10dBu (245 mV)	+12 dBu (3.07 V)	RCA Jack

**NOTE:** (1) All connectors are unbalanced.

# Specifications

VM/VRM11S,11T-DRV

## ♪ Input specifications.

<i>Input terminals</i>	<i>Actual Load Impedance</i>	<i>For use with nominal</i>	<i>Input level</i>			<i>Connector in mixer</i>
			<i>Sensitivity</i>	<i>Nominal (limit)</i>	<i>Max. before clip(Main Out)</i>	
<b>MIC IN (1-9) LOW IMPEDANCE</b>	4 kohms	600 ohms mic	-50 dBu (2.45 mV)	$\pm 3/41$ dB	-34 dBu (15.5 mV)	XLR Jack
<b>LINE IN (1-7) LOW IMPEDANCE</b>	4 kohms	600 ohms lines	-20 dBu (24.5 mV)	$\pm 3/41$ dB	-14 dBu (154 mV)	Phone Jack
<b>LINE IN (8-11) LOW IMPEDANCE</b>	4 kohms	600 ohms lines	-10 dBu (245.0 mV)	$\pm 3/41$ dB	-14 dBu (154 mV)	Phone Jack
<b>AUX IN</b>	10 kohms	600 ohms lines	-10 dBu (245.0 mV)	$\pm 3/41$ dB	6 dBm (1.5 V)	Phone Jack
<b>TAPE IN</b>	10 kohms	600 ohms lines	-10 dBu (245.0 V)	$\pm 3/41$ dB	6 dBm (1.5 V)	RCA Jack

**NOTE:** (1) Sensitivity is the lowest level that will produce a full power output, or the nominal output level when the unit is set to maximum gain.

(2) XLR connectors are balanced. Phone jacks are unbalanced.

## ♪ Output specifications.

<i>Output terminals</i>	<i>Actual Load Impedance</i>	<i>For use with nominal</i>	<i>Output level</i>		<i>Connector in mixer</i>
			<i>Nominal</i>	<i>Max. before clip</i>	
<b>SPEAKER OUT</b>	0.08 ohm	4 ohms SP	300 W	314 W	Phone Jack
		8 ohms SP	200 W	200 W	Phone Jack
<b>MAIN OUT</b>	600 ohm	100k ohms lines	+4dBu (1.2 V)	+20 dBu (8.3 V)	Phone Jack
<b>MONITOR OUT</b>	600 ohm	100k ohms lines	+4dB (1.2 V)	+20 dBu (8.3 V)	Phone Jack
<b>EFX OUT</b>	600 ohm	100k ohms lines	+4dBu (1.2 V)	+20 dBu (8.3 V)	Phone Jack
<b>TAPE OUT</b>	600 ohm	100k ohms lines	-10dBu (245 mV)	+12 dBu (3.07 V)	RCA Jack

**NOTE:** (1) All connectors are unbalanced.

[illegible]

[illegible]

[illegible]



**PROFESSIONAL AUDIO**  
**ENGINEERING AND MANUFACTURING**